## WAC 296-307-45555 Make sure heating the liquid in your dip tanks does not cause a fire.

## You must:

• Keep the temperature of the liquid in the dip tank:

- Below the liquid's boiling point - At least 100°F below the liquid's autoignition temperature.

[Statutory Authority: RCW 49.17.010, 49.17.040, 49.17.050, and 49.17.060. WSR 03-10-068, § 296-307-45555, filed 5/6/03, effective 8/1/03.]