WAC 296-806-20024 Inspect power transmission parts. You must inspect power transmission parts at least once every sixty days to make sure that all:

(1) Safeguarding meets the requirements of this chapter.

(2) Parts are in proper alignment.

(3) Bolts and screws that hold power transmission parts together or support the system are tight.

[Statutory Authority: RCW 49.17.010, 49.17.040, 49.17.050, 49.17.060. WSR 15-24-102, § 296-806-20024, filed 12/1/15, effective 1/5/16; WSR 04-14-028, § 296-806-20024, filed 6/29/04, effective 1/1/05.]