## WAC 296-807-17020 Visually inspect jacks and keep them in good working order.

**Note:** There are two types of inspection, frequent or periodic, depending on how often they are done.

- (1) You must inspect jacks at appropriate intervals:
- (a) Make sure frequent inspections are done by the operator or other designated person as follows:
  - (i) Before a jack is first placed in service;
  - (ii) Monthly for a jack used in normal service;
- (iii) Daily or before each use for a jack used for other than normal service;
- (iv) Before using a jack that has been altered, modified, or repaired;
- (v) Before using a jack that has not been used in one year or more.
- (b) Make sure a periodic inspection of the jack is done once a year.
- (c) Inspect the jack using Table 4, Jack Inspection Requirements, during any frequent or periodic inspection.
  - (2) You must make sure a jack that is out of order is:
  - (a) Tagged;
  - (b) Not used until repaired.
- (3) You must make sure a jack is properly lubricated at regular intervals.

**Note:** The jack should be lubricated following the manufacturer's instructions.

Table 4
Jack Inspection Requirements

| Inspection Item   | Frequent<br>Inspection | Periodic<br>Inspection |
|---|------------------------|------------------------|
| Check all of the following its                              | ems that apply         | to the jack:           |
| Improper pawl engagement                                    | X                      | X                      |
| Excessive pawl wear   | X                      | X                      |
| Chipped, cracked, or worn rack teeth                        | X                      | X                      |
| Cracked or damaged housing                                  | X                      | X                      |
| Damaged, bent, or worn threads                              | X                      | X                      |
| Leaking hydraulic fluid                                     | X                      | X                      |
| Scored or damaged plunger                                   | X                      | X                      |
| Improper functioning  | X                      | X                      |
| Free movement of swivel, heads, and caps                    | X                      | X                      |
| Loose bolts or rivets                                       | X                      | X                      |
| Damaged or improperly assembled accessory equipment         | X                      | X                      |
| Rack wear or bending  | X                      | X                      |
| Other items as specified in the manufacturer's instructions | X                      | X                      |

| Inspection Item  | Frequent<br>Inspection |              |
|--|------------------------|--------------|
| Check all of the following it  | ems that apply         | to the jack: |
| Watch the jack during operation  | X                      | X            |
| More detailed inspection<br>required if a designated<br>person determines any<br>condition discovered is a<br>hazard | X                      |              |
| Clean and check internal<br>parts for wear or damage if<br>inspection indicates an<br>internal problem               |                        | X            |

[Statutory Authority: RCW 49.17.010, 49.17.040, 49.17.050. WSR 15-23-086, § 296-807-17020, filed 11/17/15, effective 12/18/15. Statutory Authority: RCW 49.17.010, 49.17.040, 49.17.050, 49.17.060. WSR 07-03-163, § 296-807-17020, filed 1/24/07, effective 4/1/07; WSR 03-09-009, § 296-807-17020, filed 4/4/03, effective 8/1/03.]