

WAC 296-307-45025 Periodically inspect your dip tanks and associated equipment and correct any deficiencies.

You must:

- Inspect or test your dip tanks and associated equipment periodically, including:
 - Covers
 - Overflow pipes
 - Bottom drains and valves
 - Electrical wiring, equipment, and grounding connections
 - Ventilating systems
 - Fire extinguishing equipment.
- Inspect the hoods and ductwork of the ventilation system for corrosion and damage and make sure the airflow is adequate:
 - At least quarterly during operation
 - Prior to operation after a prolonged shutdown.
- Promptly fix any deficiencies found.

Note:

- To assist you in tracking your inspections and actions taken from those inspections, you may want to keep a written record
- It is recommended that inspections be at least quarterly even if the system is not operating. Depending on the chemicals in use more frequent inspection may be required.

[Statutory Authority: RCW 49.17.010, 49.17.040, 49.17.050, and 49.17.060. WSR 03-10-068, § 296-307-45025, filed 5/6/03, effective 8/1/03; WSR 97-09-013, recodified as § 296-307-45025, filed 4/7/97, effective 4/7/97. Statutory Authority: RCW 49.17.040, [49.17.]050 and [49.17.]060. WSR 96-22-048, § 296-306A-45025, filed 10/31/96, effective 12/1/96.]