

WAC 296-835-11025 Periodically inspect your dip tanks and associated equipment and correct any deficiencies. (1) You must inspect or test your dip tanks and associated equipment periodically, including:

- (a) Covers;
- (b) Overflow pipes;
- (c) Bottom drains and valves;
- (d) Electrical wiring, equipment, and grounding connections;
- (e) Ventilating systems;
- (f) Fire extinguishing equipment.

(2) You must inspect the hoods and ductwork of the ventilation system for corrosion and damage and make sure the airflow is adequate:

- (a) At least quarterly during operation;
- (b) Prior to operation after a prolonged shutdown.
- (3) You must promptly fix any deficiencies found.

Note:

- 1. To assist you in tracking your inspections and actions taken from those inspections, you may want to keep a written record.
- 2. It is recommended that inspections be at least quarterly even if the system is not operating. Depending on the chemicals in use more frequent inspection may be required.

[Statutory Authority: RCW 49.17.010, 49.17.040, 49.17.050, and 49.17.060. WSR 17-18-075, § 296-835-11025, filed 9/5/17, effective 10/6/17. Statutory Authority: RCW 49.17.010, [49.17].040, and [49.17].050. WSR 02-15-102, § 296-835-11025, filed 7/17/02, effective 10/1/02.]