

WAC 296-96-02705 Location of speed governor. Where a speed governor is used, it shall be located where it is readily accessible from outside the hoistway, inside the car, or on top of the car and it cannot be struck by any moving object in normal operation or under conditions of overtravel, and where there is sufficient space for full movement of the governor parts.

[Statutory Authority: RCW 70.87.030. WSR 23-17-141, § 296-96-02705, filed 8/22/23, effective 10/2/23.]